

**Universal Moulds cont...**


**UNI-6**



**REAR**  
Universal rear screen mould. Suits Hyundai Excel, late model & other rears, Holden VT sedan rear upper mould (upside down)

**25m Roll**


**UNI-6A**

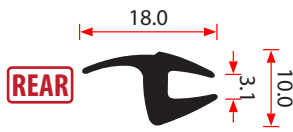

**REAR**  
Wider version of UNI-6. Same as UNI-8 but for 3mm glass.

**25m Roll**


**UNI-11**

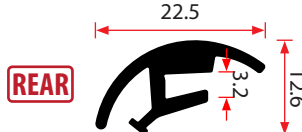

**REAR**  
VT Commodore rear lower mould.

**25m Roll**


**UNI-15**

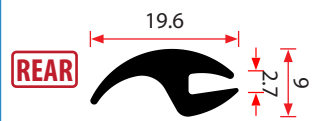

**REAR**  
VT Commodore wagon rear mould & other vehicle rear windows.

**25m Roll**


**OZ-BLOCK**



Setting block

**5m Roll**


**TP-566**

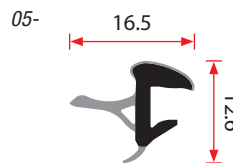

05-  
Hilux mould, 100 series top.

**25m Roll**

**TP-756**

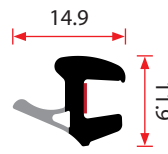


PVC Universal Mould with Butyl. 100 series top & Toyota Starlet.

**25m Roll**

**POPULAR**

**OZ-FT38**

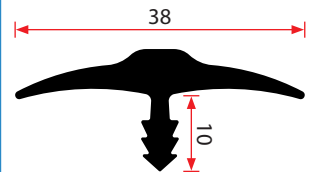

Western Star Centre Bar Up to 16 screens per length

**10m Length**

**NEW**

**Self-Adhesive Sponge Seals**

Good for canopies, hatches, toolboxes and other various applications.


**OZ-50110-RL50**



EPDM Sponge 50m Roll

**OZ-50110**


**OZ-50109-RL33**

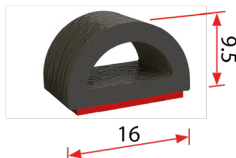

EPDM Sponge 33m Roll

**OZ-50109**


**OZ-135AT-RL33**

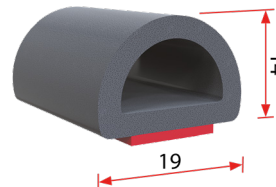

EPDM Sponge 33m Roll

**OZ-135AT**

**OZ-019-RL66**

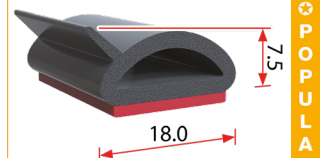


EPDM Sponge 66m Roll

**OZ-019**

**POPULAR**

**OZ-50449-RL33**

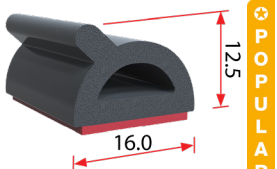


EPDM Sponge 33m Roll

**OZ-50449**

**POPULAR**


**OZ-5036-2-RL33**

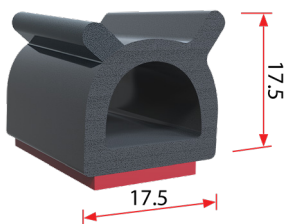

EPDM Sponge 33m Roll

**OZ-5036-2**


**OZ-TP95-RL50**

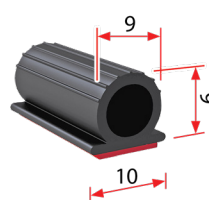

TPR 50m Roll

**OZ-TP95**

**OZ-TGSEAL-RL33**

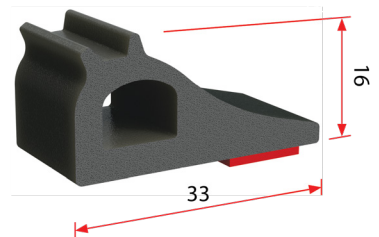


EPDM Sponge 33m Roll


**OZ-TGSEAL**

Used as general purpose rubber seals Comes with self-adhesive tape

**Pinchweld PVC Trim & Co Extrusions - 50m Rolls**

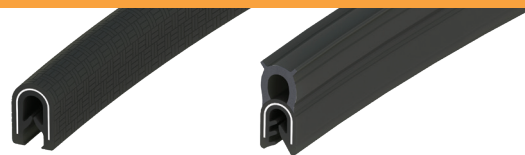

**090Z035-RL50**

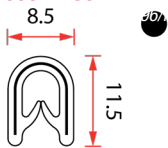


**Grip Range:** 0.5 - 2.0mm

✦ **BULLBAR EDGE PROTECTOR**

**090Z035**

**090Z056-RL50**

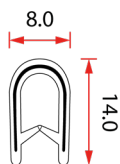


**Grip Range:** 1.0 - 3.5mm

✦ **EDGE PROTECTIVE TRIM**

**090Z056**

**186N12-RL50**

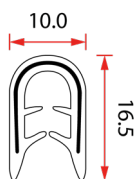


**Grip Range:** 0.8 - 3.5mm

✦ **EDGE PROTECTIVE TRIM**

**186N12**

**090Z053-RL50**

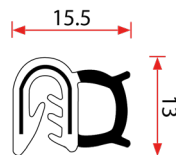


**Grip Range:** 0.5 - 4.0mm

**WIRE CAGE**

✦ **TOOLBOX SIDE**

**090Z053**

**090Z051-RL50**

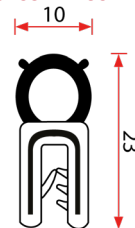

**Grip Range:** 0.5 - 4.0mm


**WIRE CAGE**

✦ **TOOLBOX LID**

**090Z051**


**Mylar - Per Metre**

**TORANA**

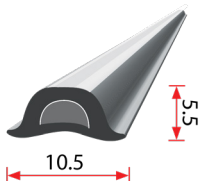


**Use with Rubbers:** Torana LC, LJ, LH, LX, Corolla KE30

**GEMINI**

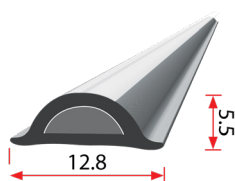

**Use with Rubbers:** Gemini TX-TG, Cortina TC

**COMMODORE**

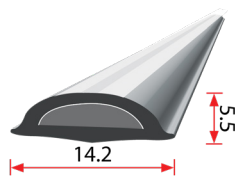

**Use with Rubbers:** Commodore VB-VH, BMW E30, Early Valiant R & S, VC-VF, AP5-AP6


**COMM-BLK**



**Use with Rubbers:** Commodore VB-VH, BMW E30, Early Valiant R & S, VC-VF, AP5-AP6


✦ **EPDM** ✦ **BLACK**

**MINI**

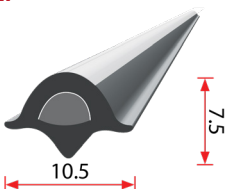


**Use with Rubbers:** Mini, Kenworth Trucks

**VALIANT**

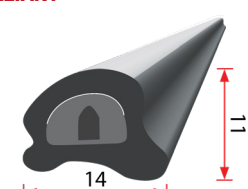

**Use with Rubbers:** Valiant VH-CM


**VOLKSWAGEN**

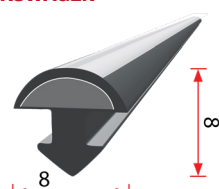

**Use with Rubbers:** Early Beetle, Kombi

**Checker Plate SBR Matting**


**OZ3.5-120CP-RL10**

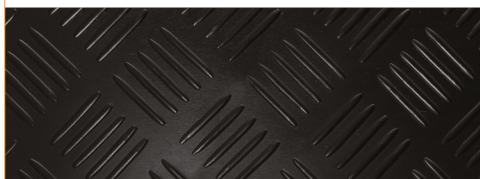

**THICKNESS:** 3.5mm  
**WIDTH:** 1200mm  
**REINFORCED:** NONE  
**ROLL LENGTH:** 10m


**Wide Rib SBR Matting**

**OZ3.5-183WR-RL10**

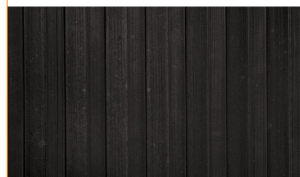

**THICKNESS:** 3.5mm  
**WIDTH:** 1830mm  
**REINFORCED:** NONE  
**ROLL LENGTH:** 10m

**OZ5-183WR-RL10**

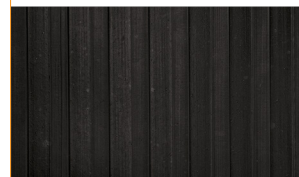

**THICKNESS:** 5mm  
**WIDTH:** 1830mm  
**REINFORCED:** COTTON  
**ROLL LENGTH:** 10m